


FLANGE ADAPTORS – TYPE B (RESTRAINED) PRESSURE-RATED CONNECTOR / INTEGRAL RESTRAINT

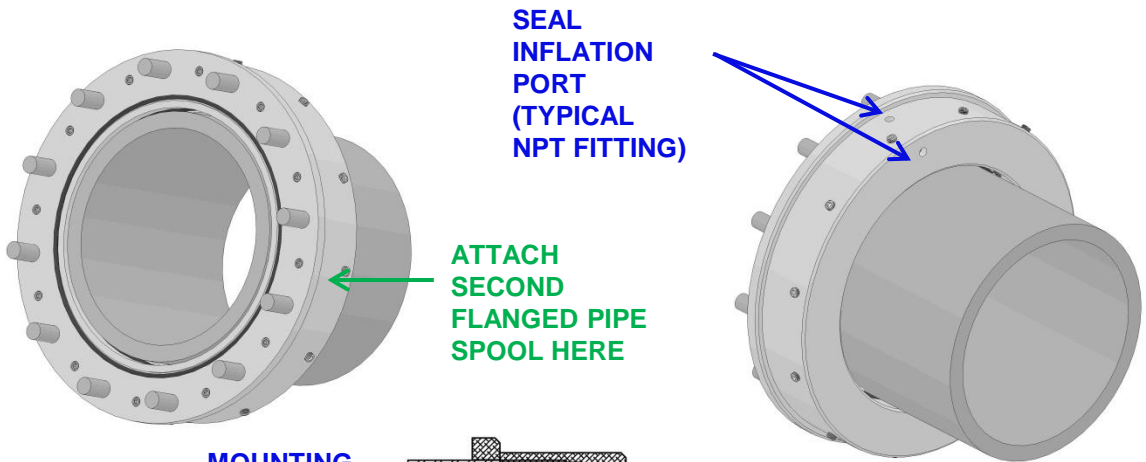


HOW IT WORKS

1. SLIDE PIPE THROUGH FLANGE ADAPTOR SEAL. INFLATE SEAL.
2. TORQUE RESTRAINT SCREWS INTO PIPE O.D.
3. ATTACH MATING FLANGED PIPE SPOOL OR FITTING TO FLANGE FACE.

NOTE: IN THIS CONFIGURATION, MRD, INC. PROVIDES FULL PRESSURE-RATED RESTRAINT THAT KEEPS THE FLANGE ADAPTOR FROM SLIDING OFF THE PIPE WITHIN IT WHEN INTERNAL PRESSURE IS PRESENT.

ADVANTAGE: INTEGRAL RESTRAINT FOR STANDARD PRODUCTION AND EMERGENCY USE!

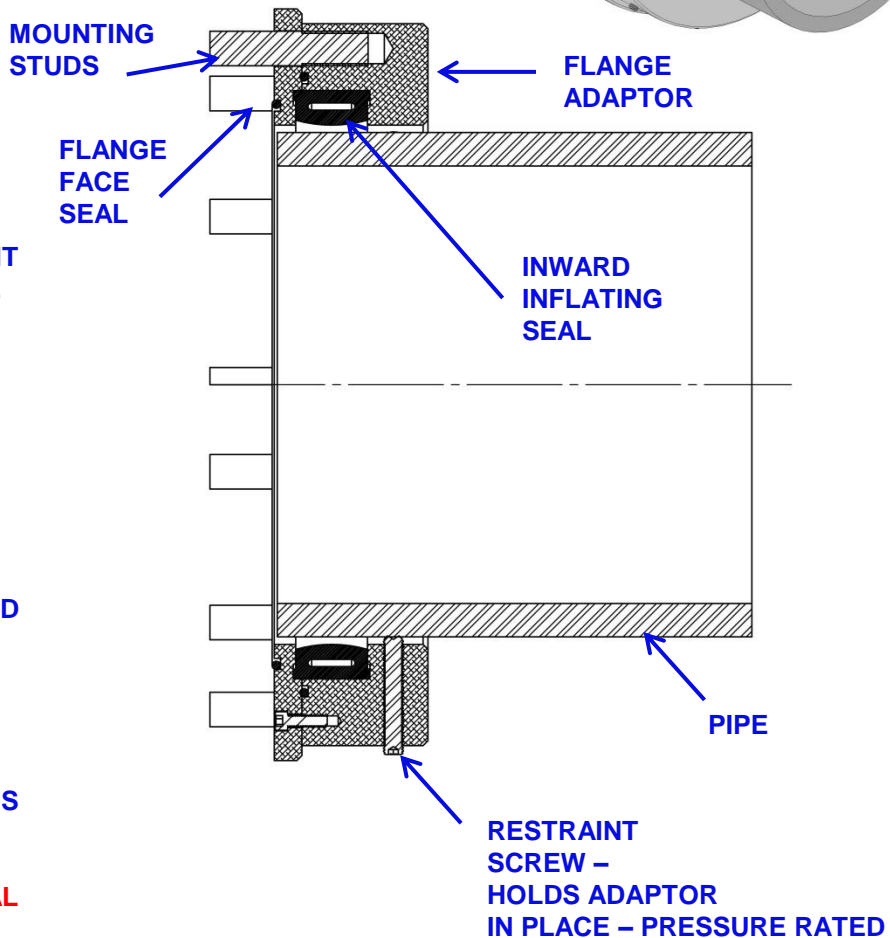

SEALFAST™
Products

**Mechanical Research
& Design, Inc.**

